

Programming Remote

Step 1:

Press the "TV" button

Step 2:

Hold down the "Setup"

Step 3:

Punch in the Code

Test the Volume or Power

New Entone Remote Programming

TELEVISION

888	04159	Aventura	00171
Acer	01339, 04143	Baysonic	00180
Admiral	04030, 03485, 04111, 00093, 00463	Bell & Howell	00154
Advent	00761, 01570	BGH	04029, 00898, 04070, 02414, 00876, 03485, 04028, 04030
Affinity	03717, 03716, 03870, 03577	Blue Sky	02153, 03997
Aiwa	01362	Bradford	00180
Akai	00702, 01675, 00812, 01385, 00672, 01935, 00765	Britania	02414
Alfide	00672	Broksonic	00463, 01935, 01938, 01892
America	04179	CCE	03782, 04091, 00623, 04092
America Action	00180	Celera	00765
Anam	00180	Champion	01362
AOC	01589, 03720, 01365, 02014, 04170, 02087, 02402, 01590, 02479, 02621, 04184, 04185, 03707, 04101, 04169, 04173	Changhong	03814, 00765
Aomni	01623	Cinal	00451
Apex Digital	00765, 02397, 00748, 01217, 00890	Citizen	01935
Ario	02397	Clarion	00180
Astar	01738, 01531	Claris	03807
Asus	03340	Coby	03478, 03627, 02315, 02344, 02306, 02314, 02345, 01634, 02338, 02326, 02340, 03629, 01538, 02347, 02348, 03202
Atvio	03638, 03636, 03653	Commercial Solutions	01447
Audinac	00180	Contec	00180
Audiovox	02413, 00875, 01865, 00180, 01564, 01868, 01276, 01766, 01769, 02121, 03065, 00451, 00623	Contex	04053
Auria	02087, 02014, 02277	Continental	01682, 03321, 04179
		Continental Electric	03322, 03321
		Coradir	02844
		Craig	00180, 03423
		Crown	00180, 00672
		Crown Mustang	00672, 00898
		Curtis	03577, 02855, 03121, 02466, 02352, 03895, 02397, 03939, 01326, 03636, 04035, 01314, 02559, 03228, 03382
		Curtis Mathes	00451, 00702, 01661, 00093, 00145, 00154, 01347
		CXC	00180
		Cytron	01326
		Daewoo	01661, 00623, 00451, 00661,

Daytek	02241	Gateway	01755, 01756	01564, 01326,
Dell	01403, 01863, 01264	GE	00451, 01547, 01447, 01347, 00051, 00178, 00765	02002, 01423, 01892, 01517, 00171, 00463, 01385, 01660, 01963, 02184, 02416, 02751, 03227
Denon	00145	General Electric	00451, 01547, 01447, 01347, 00051, 00178, 00765	00017
Digital Lifestyles	01765	GFM	00171, 01665, 01963, 01886, 01864, 01865	iRIS 02189 IRT 00451, 01661 iSymphony 03429, 03382, 03118, 03094, 03863
Disney	01892, 01665	Gibraltar	00017	JC Penney 01347, 00051, 00178, 00156
Dukane	01398	GoldStar	00178	JCM 02189, 02256
Dumont	00017	GPX	03980, 03977, 03196	Jensen 01326, 03204, 00761
Durabrand	00463, 00171, 01570, 01665, 00178, 00180	Gradiente	01369, 01029	JVC 01774, 01601, 02321, 02271, 01253, 00053, 03650, 00463, 01670, 03841, 04070, 02264, 00650, 01892
Dynex	02049, 01463, 02184	Grundig	00672	KC 04182
Electrograph	01755, 01623	Grunpy	00180	KDS 01498, 01687
Electrohome	00463, 01570, 01670	Haier	01749, 02309, 01748, 03382, 01753, 03429, 02293, 02876, 03987, 04120, 01570, 03204	KEC 00180 Ken Brown 04056, 04099 Kioto 00785 KLH 00765 Kolin 01240 Konka 01939, 01385 Kreisen 00876 KTV 00180 Legend 02397, 02309 Lexus 03638 LG 02731, 01423, 01859, 02358, 00178, 03941, 03397, 04017, 02424, 01265, 03979, 01753, 02612, 00017
Elite	03867	Hallmark	00178	LodgingStar 03147
Emerson	01864, 01394, 03623, 00171, 00463, 01963, 00180, 01913, 01886, 00178, 01944, 00623, 01661, 01665, 02183, 00451, 01909, 00154, 03559	Hannspree	01348, 02786, 01351	LXI 00154, 00156, 00178, 00017, 01347
Emprex	01765	Harvard	00180	MAG 01687, 01498
Encross	00876	Havermey	00093	Magnasonic 01913
Envision	01589, 01365, 02087, 02014, 02621	H-Buster	03620, 03419	Magnavox 01866, 03623, 02372, 02597, 01454, 01913, 01944, 01963, 01455, 01990, 03708, 00171,
Epson	01122	Helios	00865	
Epworth	01362	Hello Kitty	00451	
EQD	02014, 02087, 02277	Hewlett	01642	
EQD Auria	02014, 02087, 02277	Hitachi	04179, 00180, 03519, 02183, 01660, 02098, 01314, 00748, 03382, 04029, 01643, 03644, 00145, 01145, 01345, 03639, 02433, 03697, 00679, 02215, 02981	
ESA	00812, 00171, 01944, 01963	Hitech	01682, 01814, 04179, 04183	
Fair Mate	01326	Hiteker	03118	
Favi	03382	HP	01642	
Fisher	00154, 01362	Hyundai	03418, 01814	
Fluid	02964	iLo	01665, 01684, 01990, 01463, 01286, 01394	
Frigidaire	02231	Imperial	04183	
Funai	01864, 00171, 00180, 01271, 01394, 01963	Initial	01990	
Futuretech	00180	Insignia	02049, 01641,	

	01365, 00051, 01755, 01867	Norcent	01365, 01589, 00748, 01590	01498, 01276, 01538, 01385,	Samsung	02051, 00812, 01632, 03993,	Starlite	00180	Vidikron	01398
Magnum	04179	Nordmende	03419, 03861,	01767, 03942,		00702, 00766,	STI	03793	Vidtech	00178
Marantz	01398, 01454		03134, 03327,	04035, 01687,		00650, 00178	SunBriteTV	02337, 01610,	Viewsonic	02014, 02087,
Matsushita	00051, 00250,		03767, 03835	02121, 00765,				02528		03706, 00864,
	00650	Norwood Micro	01286	00865, 01314,	Sansei	04030, 00451	Superscan	00864, 01944,		01330, 01627,
Maxent	01755, 01757	NuVision	02158, 01657		Sansui	00463, 01892,	Supersonic	00093, 00171		01640, 01755,
MB Quart	01868	Ölevia	01610, 01240,	01766, 04074,		03540, 01670,		03593, 03154,		02049, 02111,
Megatron	00145, 00178		01331, 01144	01286, 01326,		01935, 01463,		01753, 02104,		02277, 00885,
Memorex	00463, 01570,	Onwa	00180	02002	Portland	03564, 01938,		03595, 03204,		01542, 01564,
	01670, 01938,	Optimus	00250, 01927,	01749	Prima	01409, 04053,		03894		01578, 01742,
	00178, 01892,		01913, 01924,			03377, 00171,	SVA	00748, 00865,		01365
	01665, 00150,		00154, 00650,		Prism	03559		01963	Viore	02352, 03382,
	00154, 01687,		00679		Proscan	01142, 01362,	Sylvania	01864, 01886,		03118, 03429,
	01924, 01927	Optique	02189	02183, 03382,		00154, 03488,		00171, 01963,		02104, 03863,
MGA	00150, 00178	Optonica	00093	03577, 02256,		03697, 03861,		01944, 01913,		02496, 03094,
Microsonic	01326, 02483,	Orion	00463, 01463,	01447, 03332,		00799, 00088		01394, 01665,		01684, 03594,
	03328, 03419,		01938, 03485,	03717, 03895,		03899, 02528,		01271, 01314		03154
	03679		01982, 03540,	03939, 01347,		02337, 01217,	Symphonic	00171, 01913,	VisionQuest	03154
Midland	00017, 00051		03650	02147, 02746,		01360, 04139,		01944, 01963,	Vivitek	01369
Mintek	01990	Panasonic	01480, 01291,	03429, 03636,		00878		01394, 00180	VIZIO	01758, 03758,
Miray	03847, 02414,		00250, 00650,	04035	Proton	00178	Scotch	00178		02707, 02757,
	02429, 03183,		02264, 00051,	01687, 01498	Proview	01687, 01498	Scott	00178, 00180		03415, 02512,
	04176, 04177,		01927, 01947,	00017	Pulsar	00017	Sears	00154, 00156,	Tandy	00093
	01814, 03322,		01636, 01924,	02196	Pyle	02196		00171, 00178,	Tatung	01286, 02496,
	00785, 03485,		01941, 03825,	02196	Pyle Home	02196	Seiki	01547		01756
	04178, 00898,		00053, 00093,	02337	QuantumFX	02337		03953, 02964,	TCL	02434, 03183,
	03309, 03321		00145, 00150,	00051, 00250,	Quasar	00051, 00250,		03559, 03560,		02429, 03426,
Misakai	00171		00154, 00156,	01291, 01927,		01291, 01927,		00178		03847, 04176,
Mitsubishi	01250, 00150,		00178, 01271,	01924, 03899,		01924, 03899,	Seiko Epson	01122		04177, 02414,
Electric	00178, 01797,		01347	00650		00650	Seleco	01351		03047, 00898,
	00093	Panavideo	03679	00180, 00178,		00180, 00178,	Semivox	00180		02403, 04178
Mitsui	04179, 03658,	Panavox	04057	00154	RadioShack	00180, 00178,	Semp	01743, 00156	Technics	00051, 00250,
	03638	PARK	02104			00154	Semp Toshiba	01743, 03793,		00017, 01347,
Motorola	00093	Penney	01347, 00051,	02746, 02932,	RCA	02746, 02932,		03469, 00156		00650
Multitech	00180		00178, 00156	02434, 01447,		02434, 01447,	Sens	01865	Techwood	00051
NAD	01156, 00156,	Philco	03426, 02414,	04214, 02247,		04214, 02247,	Serie Dorada	03814	Teknika	00180, 00150
	00178		03639, 03697,	03577, 01781,		03577, 01781,	Sharp	02360, 00818,	Telefunken	02414, 00702,
Naxa	02104, 04093,		01665, 00171,	02187, 03382,		02187, 03382,		02951, 03394,		04025
	03154, 03382,		01029, 01271,	01547, 01347,		03717, 03332,		01602, 02402,	TMK	00178
	03423		01963, 01394,	03717, 03332,		00679, 02403,	Sheng Chia	03867, 00093	TNCi	00017
NEC	01797, 01704,		01661, 00145,	00679, 02403,		01661, 02429,		00093	Tophouse	00180
	01398, 00876,		01362, 00463	01661, 02429,		03147, 03378,	Sigmac	03477, 03423	Toshiba	01524, 01656,
	02293	Philips	01867, 02372,	03419, 00093,		03419, 00093,	Silo	03794, 03477,		02724, 00156,
NetTV	01755		01454, 01455,	01385, 01868,		01385, 01868,		04182		03134, 01156,
New Acoustic	01156, 00156,		02374, 02597,	02002, 02183,		02002, 02183,	Silo Digital	03794, 03477,		01256, 02006,
Dimension	00178		02708, 01744,	02855, 03938,		02855, 03938,		04182		01935, 01945,
NEX	01814		01866, 02622,	03939, 00051,		03939, 00051,	Siragon	04057		02684, 01743,
Nexus	02183		00690, 00017,	00090, 03121,		00090, 03121,	Solé	01623		03469, 01704,
Electronics			03623, 00171,	03636, 04093		03636, 04093	Soneview	04179		00650, 01369,
Nikko	00178, 00017,		01944, 01365,	00154, 00180,	Realistic	00154, 00180,	Sony	00810, 01300,		01265, 00093,
	01347, 00154,		01990, 01394,	00178		00178		01685		00154
	00156		01589	00178	Recco	03847, 00898,	Soundesign	00178, 00180	TruTech	01665, 01723
Nimbro	02104	Pioneer	01457, 00679,	01814, 03183		01814, 03183	Soyo	01520	TVS	00463
Noblex	01362, 03697,		01260, 01398	01623	RevolutionHD	01623	Spectroniq	01498, 01687	Upstar	04182
	04029, 03803,	Planar	00679, 01589	01398, 00017	Runco	01398, 00017	Speler	04041	US Logic	01286
	04030, 00154	Polaroid	01523, 01769,	01755	Sampo	01755	Squareview	00171	Venturer	01865, 01868
							SSS	00180	Victor	00053

